## MERCURY-KOB-BR100 Modem Port Açma Ayarları

MERCURY-KOB-BR100 Modemlerde Port açmak için;

Internet Explorer adres satırına http://192.168.1.1 yazarak enter butonuna basınız



Karşınıza şifre ekranı gelecektir OK butonuna tıklayın.

Site:	192.168.1.1
Realm	DSL Router
<u>U</u> ser Name	
Password	
□ <u>S</u> ave this	a password in your password list

Açılan pencerede; Çıkan modeminizin Ana Menüsünde **Basic Setup** ve **Advanced Setup** olmak üzere iki seçenek vardır. **Advanced Setup** 'a tıklayın.

				Thomas & Instant
System     System Time     Administrator Cettings     Firmware Upgrade     Configuration Tools     Status     System Log     Preset     WAN     VAN     VAN     AN     Firewall	Status You can use the Status screen to see the commerce connected clients to your network WAN Connection Type Dynamic IP WAN IP Subnet Mask 255.255.255.0 Gateway	connection status for the Broadband Router's k.	WANLAN interfaces, firmware and hi	ardware version numbers, and the

Soldaki menü listesinden -> NAT -> Virtual Server seçeneğine tıklayınız.

0 System 0 KAN 0 LAN 0 NAT	Virtual Ser	ver re the Broadband Router as a virtual s	ORTER a	OTV ccessing services s	vard	.com
Di Special Application Di official Electrici Ol Firewall	words, dependir the appropriate	ing on the requested service (TCP/UDP server (located at another internal IP a	tically redirected to local serv port number), the Broadbank ddress).	ers configured with I Router redirects t	private IP addresses, in o e external service reques	ther t to
C Special Application Provide Server O Freval	words, depende the appropriate	a public IP addresses can be accome gon the requested service (TCP/UDP server (located at another internal IP a Mapping Ports	port number), the Broadbank ddress).	Enabled	private IP addresses, in o e external service reques	ther t to
C Special Application Of Stream	your focus site v words, depending the appropriate	a poor i P addresses can de address go n'he requested service (TCP/UDP server (located at another internal IP a Mapping Ports	port number), the Broadbane ddress). Server IP 192, 168, 1,	Enabled	private IP addresses, in o e external service reques	ther t to
C Special Application D Const Entro D Firewall	your focal she v words, dependent the appropriate	a poor (P addresses can be address go nthe requested service (TCPAUDe server (located at another internal IP a Mapping Ports	dress). Server IP 192. 168. 1. 192. 168. 1.	Enabled	prvate in addresses, in o e external service reques	ther t to

Mapping Ports bölümüne açmak istediğiniz portu yazınız. Server IP bölümüne de PC, DVR veya IP kameranın IP numarasını yazınız ve Enabled seçeneğini işaretleyiniz.