## Zoom 5554A Modem Port Açma Ayarları

Zoom 5554A Modemlerde Port açmak için;

Internet Explorer adres satırına http://10.0.0.2 yazarak enter butonuna basınız



Karşınıza şifre ekranı gelecektir ve bu ekranda Kullanıcı Adı : admin ve Şifre bölümüne zoomadsl yazarak OK butonuna basınız.



Karşınıza aşağıdaki **Basic Setup** Menüsü çıkacaktır. Bu menüden **Advanced Setup** ardından **NAT** bölümünü seçiniz.

zoom + Syste	om Status ADSL Status	+ Basic Setup + Advanced Setup	+ Help					
mced Setup vanced Setup includes a	Advanced Setup							
r of options for ized or advanced	Configuration							
These options te configured by	WAN Configuration	IP Filtering	Firewall					
d networking or under the	Port Settings	риср	NAT					
on of a technical t representative.	Bridging	IP Routing	RIP					
anges made will permanent until	Dynamic DNS	Blocked Protocols	LAN					
es using the Write gs to Flash at the bottom of	SNMP	Bridge Filter						
nfiguration page. etailed information h page is available	Status							
ing the Help icon.	ADSL Status	TCP/IP Status	ATM Status					
	PPP Status	EoA Status	IPoA Status					
	Administration							
	User Configuration	Diagnostics	System Log					
	Firmware Update	Backup/Restore Config	Reboot					
	Set Date and Time	1						

Karşınıza Network Address Translation (NAT) Rule Configuration Menüsü çıkacaktır. Burda en son girilmiş Rule ID değerine bakın. Bu örnekte son girilen Rule ID değeri 5, sizde farklı olabilir bu değeri aklınızda tutun. Sonra NAT Option 'dan NAT Rule Entry 'i seçip Add butonuna basın.

			iguration	L.	Network Address Translation (NAT) Rule Configuration							
	NA	T Options:	NAT Rule Entry	×								
ile ID IF Nam	e Rule Flavor	Protocol	Local IP From	n Local IP To	Action							
ALL	NAPT	ANY	0.0.0.0	255.255.255.255	TP Stats							
ALL	RDR	TCP	10.0.0.254	10.0.0.254	■ P Stats							
ALL	RDR	TCP	10.0.0.254	10.0.0.254	■ P Stats							
ALL	RDR	TCP	10.0.0.254	10.0.0.254	TP Stats							
0-qqq	RDR	TCP	10.0.0.4	10.0.0.4	BP Stats							
	Add	Add	Ie ID IF Name Rule Flavor Protocol   ALL NAPT ANY   ALL RDR TCP   ALL RDR TCP	Ie ID IF Name Rule Flavor Protocol Local IP From   ALL NAPT ANY 0.0.0   ALL RDR TCP 10.0.254   ALL RDR TCP 10.0.254   ALL RDR TCP 10.0.254   ALL RDR TCP 10.0.254   Ppp-0 RDR TCP 10.0.4	Ie ID     IF Name     Rule Flavor     Protocol     Local IP From     Local IP To       ALL     NAPT     ANY     0.0.0     255.255.255     255       ALL     RDR     TCP     10.0.0.254     10.0.0.254       PIPP-0     RDR     TCP     10.0.0.4     10.0.0.4	Ie ID   IF Name   Rule Flavor   Protocol   Local IP From   Local IP To   Action     ALL   NAPT   ANY   0.0.0   255.255.256.255   ID P Stats     ALL   RDR   TCP   10.0.0.254   10.0.0254   ID P Stats     ALL   RDR   TCP   10.0.0254   10.0.0254   ID P Stats     ALL   RDR   TCP   10.0.0254   ID P Stats     ALL   RDR   TCP   10.0.0254   ID P Stats     PPP-0   RDR   TCP   10.0.0.4   ID P Stats						

Karşınıza aşağıdaki NAT Rule - Add Menüsü çıkacaktır. Rule ID bölümüne üsteki son numaranın bir üstünü yazın Protocol Bölümünden TCP yi seçin Local Address bölümlerine PC, DVR veya IP kameranın IP numarasını yazınız. Port bölümlerine de açmak istediğiniz port numarasını yazınız ve Save Changes butonuna tıklayınız.

NAT Rule Information	
Rule Flavor:	
Rule ID:	6
IF Name:	ppp-0
Protocol:	
Local Address From:	10 0 0 4
Local Address To:	10 0 0 4
Global Address From:	0 0 0 0
Global Address To:	0 0 0 0
Destination Port From:	Any other port 💌 4662
Destination Port To:	Any other port 💌 4662
Local Port:	Any other port 💽 4662
Save Changes Close	

The Advanced Setup	
section includes a	
number of options for	
specialized or advanced	
settings. These options	
should be configured by	
users with knowledge of	
DSL and networking	
settings or under the	
direction of a technical	
support representative.	

Add
After you have saved your changes, you must write the new settings to flash to make them permane

NAT Options: NAT Rule Entry

0.0.0.0

10.0.0.254

10.0.0.254

10.0.0.254

10.0.0.4

10.0.0.4

ANY

TCP

тср

TCP

TCP

TCP

Rule ID IF Name Rule Flavor ALL

ALL

ALL

ALL

ppp-0

ppp-0

5

6

NAPT

RDR

RDR

RDR

RDR

RDR

Local IP From Local IP To Actio

10.0.0.254

10.0.0.254

10.0.0.254

10.0.0.4

10.0.0.4

255.255.255.255 🗇 🗩 Stats

TR Stats

⑦ ₽ Stats

TP Stats

⑦ ₽ Stats

□ P Stats

2	
oom	NAT Rule - Add
NAT Rule Information	
Rule Flavor:	RDR 💌
Rule ID:	7
IF Name:	ррр-О 💌
Protocol:	
Local Address From:	10 0 0 4
Local Address To:	
Global Address From:	
Global Address To:	
Destination Port From:	Any other port 🕑 4672
Destination Port To:	Any other port 🕑 4672
Local Port:	Any other port 💽 4672

Karşınıza aşağıdaki menü çıkacaktır. Burda son ilave ettiğiniz 7 numaralı NAT Rule görülecektir. Şimdi yaptıklarınızı kayıt etmek için Write Settings to Flash butonuna basın.

vanced Setup			PRAT	opuons.	• • • • • • • • • • • • • • • • • • • •				<u> </u>	
Advanced Setup tion includes a ober of ontions for	Rule ID	IF Name	Rule Flavor	Protocol	Local IP From	Local IP To	Action			
cialized or advanced ings. These options	1	ALL	NAPT	ANY	0.0.0.0	255.255.255.255	ם₽[	Stats		
rs with knowledge of and networking	2	ALL	RDR	TCP	10.0.0.254	10.0.0.254	@₽[	Stats		
tings or under the action of a technical	3	ALL	RDR	TCP	10.0.0.254	10.0.0.254	±₽[	Stats		
changes made will	4	ALL	RDR	TCP	10.0.0.254	10.0.0.254	₩₽	Stats		
have committed the nges using the Write	5	ppp-0	RDR	TCP	10.0.0.4	10.0.0.4	@₽[	Stats		
ttings to Flash ton at the bottom of configuration page.	6	ppp-0	RDR	TCP	10.0.0.4	10.0.0.4	司 2	Stats		
re detailed information	7	ppp-0	RDR	UDP	10.0.0.4	10.0.0.4	≣₽[	Stats		