

# Zoom X4 5551A Modem Port Açma Ayarları

Zoom X4 5551A Modemlerde Port açmak için;

İnternet Explorer adres satırına **http://10.0.0.2** yazarak enter butonuna basınız



Karşınıza şifre ekranı gelecektir ve bu ekranda **Kullanıcı Adı : admin** ve **Şifre** bölümüne **zoomadsl** yazarak **OK** butonuna basınız.

www.rimaelektronik.com



Karşınıza aşağıdaki **Basic Setup** Menüsü çıkacaktır. Bu menüden **Advanced Setup** ardından **NAT** bölümünü seçiniz.



Karşınıza **Network Address Translation (NAT) Rule Configuration** Menüsü çıkacaktır. Burda en son girilmiş **Rule ID** değerine bakın. Bu örnekte son girilen **Rule ID** değeri 5, sizde farklı olabilir bu değeri aklınızda tutun. Sonra **NAT Option** 'dan **NAT Rule Entry** 'i seçip **Add** butonuna basın.

**Advanced Setup**  
The Advanced Setup section includes a number of options for specialized or advanced settings. These options should be configured by users with knowledge of DSL and networking settings or under the direction of a technical support representative.  
Any changes made will not be permanent until you have committed the changes using the **Write Settings to Flash** button at the bottom of any configuration page.  
More detailed information for each page is available by clicking the Help icon.

### Network Address Translation (NAT) Rule Configuration

NAT Options: **NAT Rule Entry**

Rule ID	IF Name	Rule Flavor	Protocol	Local IP From	Local IP To	Action
1	ALL	NAPT	ANY	0.0.0.0	255.255.255.255	Stats
2	ALL	RDR	TCP	10.0.0.254	10.0.0.254	Stats
3	ALL	RDR	TCP	10.0.0.254	10.0.0.254	Stats
4	ALL	RDR	TCP	10.0.0.254	10.0.0.254	Stats
5	ppp-0	RDR	TCP	10.0.0.4	10.0.0.4	Stats

**Add**

After you have saved your changes, you must write the new settings to flash to make them permanent. Click the button below to do this.

**Write Settings to Flash**

Karşınıza aşağıdaki **NAT Rule - Add** Menüsü çıkacaktır. **Rule ID** bölümüne üsteki son numaranın bir üstünü yazın **Protocol** Bölümünden **TCP** yi seçin **Local Address** bölümlerine PC, DVR veya IP kameranın IP numarasını yazınız. **Port** bölümlerine de açmak istediğiniz port numarasını yazınız ve **Save Changes** butonuna tıklayınız.

### NAT Rule - Add

**NAT Rule Information**

Rule Flavor:	RDR
Rule ID:	6
IF Name:	ppp-0
Protocol:	TCP
Local Address From:	10 0 0 4
Local Address To:	10 0 0 4
Global Address From:	0 0 0 0
Global Address To:	0 0 0 0
Destination Port From:	Any other port 4662
Destination Port To:	Any other port 4662
Local Port:	Any other port 4662

**Save Changes** **Close**

**Advanced Setup**  
The Advanced Setup section includes a number of options for specialized or advanced settings. These options should be configured by users with knowledge of DSL and networking settings or under the direction of a technical support representative.  
Any changes made will not be permanent until you have committed the changes using the **Write Settings to Flash** button at the bottom of any configuration page.  
More detailed information for each page is available by clicking the Help icon.

### Network Address Translation (NAT) Rule Configuration


NAT Options: **NAT Rule Entry**

Rule ID	IF Name	Rule Flavor	Protocol	Local IP From	Local IP To	Action
1	ALL	NAPT	ANY	0.0.0.0	255.255.255.255	Stats
2	ALL	RDR	TCP	10.0.0.254	10.0.0.254	Stats
3	ALL	RDR	TCP	10.0.0.254	10.0.0.254	Stats
4	ALL	RDR	TCP	10.0.0.254	10.0.0.254	Stats
5	ppp-0	RDR	TCP	10.0.0.4	10.0.0.4	Stats
6	ppp-0	RDR	TCP	10.0.0.4	10.0.0.4	Stats

**Add**

After you have saved your changes, you must write the new settings to flash to make them permanent. Click the button below to do this.

Aynı işlemi UDP protokolü içinde aşağıdaki gibi



### NAT Rule - Add

**NAT Rule Information**

Rule Flavor: RDR

Rule ID: 7

IF Name: ppp-0

Protocol: UDP

Local Address From: 10.0.0.4

Local Address To: 10.0.0.4

Global Address From: 0.0.0.0

Global Address To: 0.0.0.0

 
Destination Port From: Any other port 4672

Destination Port To: Any other port 4672

Local Port: Any other port 4672

Save Changes Close

Karşınıza aşağıdaki menü çıkacaktır. Burda son ilave ettiğiniz 7 numaralı NAT Rule görülecektir. Şimdi yaptıklarınızı kayıt etmek için **Write Settings to Flash** butonuna basın.



System Status ADSL Status Basic Setup Advanced Setup Help

### Advanced Setup

The Advanced Setup section includes a number of options for specialized or advanced settings. These options should be configured by users with knowledge of DSL and networking settings or under the direction of a technical support representative.

Any changes made will not be permanent until you have committed the changes using the **Write Settings to Flash** button at the bottom of any configuration page.

More detailed information for each page is available by clicking the Help icon.

Rule ID	IF Name	Rule Flavor	Protocol	Local IP From	Local IP To	Action
1	ALL	NAPT	ANY	0.0.0.0	255.255.255.255	Stats
2	ALL	RDR	TCP	10.0.0.254	10.0.0.254	Stats
3	ALL	RDR	TCP	10.0.0.254	10.0.0.254	Stats
4	ALL	RDR	TCP	10.0.0.254	10.0.0.254	Stats
5	ppp-0	RDR	TCP	10.0.0.4	10.0.0.4	Stats
6	ppp-0	RDR	TCP	10.0.0.4	10.0.0.4	Stats
7	ppp-0	RDR	UDP	10.0.0.4	10.0.0.4	Stats

Add

After you have saved your changes, you must write the new settings to flash to make them permanent. Click the button below to do this.

Write Settings to Flash