

Precautions

Fully understand this document before using this device, and strictly observe rules in this document when using this device. If you install this device in public places, provide the tip "You have entered the area of electronic surveillance" in an eye-catching place. Failure to correctly use electrical products may cause fire and severe injuries.

Marning	It alerts you to moderate dangers which, if not avoided, may cause minor or moderate injuries.
	It alerts you to risks. Neglect of these risks may cause device damage, data loss, device performance deterioration, or unpredictable results.
■ NOTE	It provides additional information.



- Strictly observe installation requirements when installing the device. The manufacturer shall not be held responsible for device damage caused by users' non-conformance to these requirements.
- Strictly conform to local electrical safety standards and use power adapters that are marked with the LPS standard when installing and using this device. Otherwise, this device may be damaged.
- Use accessories delivered with this device. The voltage must meet input voltage requirements for this device.
- If this device is installed in places with unsteady voltage, ground this device to discharge high energy such as electrical surges in order to prevent the power supply from burning out.
- When this device is in use, ensure that no water or any liquid flows into the device. If water or liquid unexpectedly flows into the device, immediately power off the device and disconnect all cables (such as power cables and network cables) from this device.
- Do not focus strong light (such as lighted bulbs or sunlight) on

- this device. Otherwise, the service life of the image sensor may be shortened.
- If this device is installed in places where thunder and lightning frequently occur, ground the device nearby to discharge high energy such as thunder strikes in order to prevent device damage.

A CAUTION

- Avoid heavy loads, intensive shakes, and soaking to prevent damages during transportation and storage. The warranty does not cover any device damage that is caused during secondary packaging and transportation after the original packaging is taken apart.
- Protect this device from fall-down and intensive strikes, keep the device away from magnetic field interference, and do not install the device in places with shaking surfaces or under shocks.
- Clean the device with a soft dry cloth. For stubborn dirt, dip the cloth into slight neutral cleanser, gently wipe the dirt with the cloth, and then dry the device.
- Do not jam the ventilation opening. Follow the installation instructions provided in this document when installing the device.
- Keep the device away from heat sources such as radiators, electric heaters, or other heat equipment.
- Keep the device away from moist, dusty, extremely hot or cold places, or places with strong electric radiation.
- If the device is installed outdoors, take insect- and moistureproof measures to avoid circuit board corrosion that can affect monitoring.
- Remove the power plug if the device is idle for a long time.
- Before unpacking, check whether the fragile sticker is damaged. If the fragile sticker is damaged, contact customer services or sales personnel. The manufacturer shall not be held responsible for any artificial damage of the fragile sticker.

Special Appouncement

- All complete products sold by the manufacturer are delivered along with nameplates, quick setup guide, and accessories after strict inspection. The manufacturer shall not be held responsible for counterfeit products.
- The manufacturer will update this manual according to product function enhancement or changes and regularly update the software and hardware described in this manual. Update information will be added to new versions of this manual without prior notice.
- This manual may contain misprints, technology information that is not accurate enough, or product function and operation description that is slightly inconsistent with the actual product, the final interpretation of company is as a standard.
- This manual is only for reference and does not ensure that the information is totally consistent with the actual product. For consistency, see the actual product.

M NOTE

For more information, please refer to CD and website.

1 Open Package Examination

Open the package, check the appearance of product for no obvious damage, and confirm the item list for table 1-1 is consistent.

Table 1-1 Packing list

Component	Quantity	Remark
IP Box Camera	1	
Quick Setup Guide	1	
CD-ROM	1	
Box camera installation block	1	
Black Phillips head screw PM2×6mm	2	
Universal box camera adapter	1	
Auto iris connectorI	1	
Green socket (2Pin)	1	
Green socket (3Pin)	1	
Alarm input/output connector (4Pin)	1	

2 Device Structure

2.1 Device Ports

MOTE

Different device may have different ports, please refer to the actual product.

Figure 2-1 Hardware ports




Table 2-1 Hardware ports description

ID	Port Name	Description		
1	Lens port	Connects to a lens.		
		NOTE A CS-mount lens can be installed on the camera through this port. To install a C-mount lens, use a C/CS mount adapter.		
2	Back focusing knob	Adjusts the back focus.		
3	Auto aperture port	N/A		

Figure 2-2 Rear panel

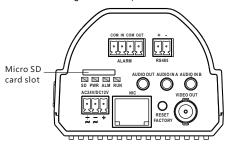


Table 2-2 Components on the rear panel

Function

Port


	0			
VIDEO OUT	Video output port	Sends analog video signals. You can connect the camera to a TV monitor through this port to view analog videos.		
AC24V/ DC12V	Power supply socket	Connects to a 12V (-15%-+10%) direc current (DC) power supply or 24V (-15%-+10%) alternating current (AC power supply. NOTE When the power is PoE, you cannot access DC12V and AC24V interface the same time.		
RUN	Status indicator	The status indicator on when the camera is powered on.		
ALM	Alarm indicator	N/A		
PWR	Power indicator	Indicates the power status.		
SD	SD card indicator	Indicates the SD card status, the status is described as follows: Off: No SD card is inserted. On: An SD card is inserted.		
СОМ	Alarm input			
IN	ports	COM: common alarm input port. IN: alarm input port.		
COM	Alarm output ports	Alarm output access ports: COM: common alarm output port. IN: alarm output port.		
NIC	Network access port	Connects to a standard Ethernet cable.		
RS485	RS485 port	Connects to an external Pan Tilt Zoom (PTZ).		
RESET FACTORY	Reset button	Restores the camera to the factory settings by pressing and holding this button for more than five seconds.		
AUDIO OUT	Audio output port	Connects to an external audio device such as a speaker		
AUDIO IN A	Audio input port	Receives an analog audio signal from devices such as a sound pickup device.		
AUDIO IN B				
Micro SD card slot	Micro SD card slot	Install a SD card. NOTE Before install a SD card, verify the card not in write protection state. Before remove the SD card. Verify the card not in write protection state. Otherwise, the data may be lost, or the SD card may be damaged.		

2.2 Camera Dimensions

■ NOTE

Different device may have different dimensions, please refer to the actual product.

Figure 2-3 Dimensions (Unit:mm)



3 Device Installation

3.1 Installation mode

MOTE

Before installing a lens, remove the front protection cap from the camera first.

3.1.1 Installing an Auto Aperture and Manual focus Lens

Step 1 Attach the lens to the camera body and turn the lens clockwise until it locks into place.

Step 2 Insert the cable plug of the lens into the IRIS port on the side of the camera body.

Step 3 After adjust focus, lock the Tele/wide and focus pullers mounted on the lens.

3.1.2 Installing a Manual Aperture and Manual focus Lens

Installing a C-Mount Manual Aperture and manual focus Lens

LLI NOTE

A C-mount lens requires a C/CS mount adapter.

Step 1 Use the Phillips screwdriver to loosen the screw on the side of the focusing ring. Turn the focusing ring counterclockwise to extend it for several millimeters and manually bring the camera into focus.

LL NOTI

The camera has been calibrated before delivery. You can also adjust the focusing ring as required to obtain the required focus.

Step 2 Tighten the screw using the Phillips screwdriver to secure the focusing ring.

Step 3 Install the C/CS mount adapter to the camera

Step 4 Attach the lens to the camera body and turn the lens clockwise until it locks into place.

Installing a CS-Mount Manual Aperture and manual focus Lens

Step 1 Use the Phillips screwdriver to loosen the screw on the side of the focusing ring. Fully turn the focusing ring counterclockwise and manually bring the camera into focus.

M NOTE

The camera has been calibrated before delivery. You can also adjust the focusing ring as required to obtain the required focus.

Step 2 Tighten the screw using the Phillips screwdriver to secure the focusing ring.

Step 3 Attach the lens to the camera body and turn the lens clockwise until it locks into place.

3.1.3 Uninstalling a Lens

Step 1 Turn the lens counterclockwise until it is removed.


Step 2 Remove the cable plug of the auto aperture lens from the IRIS port. If you are removing a manual aperture lens, skip step 2.

Step 3 If no lens needs to be installed on the camera, mount the front protection cap to protect the device.

3.2 Connecting Other Devices to the Camera Through the Ports on the Rear Panel

Figure 3-1 shows how to connect other devices to the camera through the ports on the rear panel.

Figure 3-1 Device connections

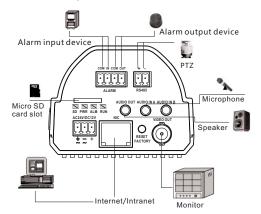

4 Quick Configuration(e.g IE)

4.1 Login

Step 1 Open the Internet Explorer, enter the IP address of IP camera (default value: 192.168.0.120) in the address box, and press Enter. The login page is displayed. as shown in figure 4-1.


Step 2 Input the user name and password.

MOTE

The default user name is admin. The default password is admin. Change the password when you log in the system for first time to ensure system security.

You can change the system display language on the login page.

Figure 4-1 Login



Step3 Click Login, the main page is displayed.


4.2 Modify IP address

Choose Configuration > Device > Local Network, the Local Network page is displayed.

Enter the IP address in the IP Address box and click **Apply** as shown n figure 4-2.

After the success of the IP address setting, please use the new IP address to log in the Web interface.

Figure 4-2 Local Network

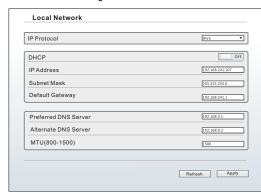

4.3 Browsing Video

To ensure the real-time video can be played properly, you must perform the following operation when you log in the web for the first time:

Step 1 the Internet Explorer. Choose Tools > Internet options > Security > Trusted sites > Sites, in the display dialog box, click Add, as shown in figure 4-3.

Step 2 In the Internet Explorer, choose Tool > Internet Options > Security > Customer level, and set Download unsigned ActiveX control and initialize and script ActiveX controls not marked as safe for scripting under ActiveX controls and plug-ins to Enable, as shown in figure 4-4.

Figure 4-3 Adding a trusted site


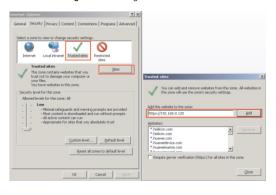


Figure 4-4 Configuring ActiveX control and plug-in

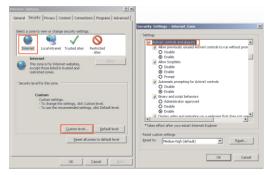

Step 3 Download and install the player control as prompted.

Щ NOTE

If the repair tips displayed when installing the control, please ignore the prompt, and continue the installation, the login page is displayed when the control is loaded.

To browse a real-time video, click Live Video. The Live Video page is displayed, as shown in figure 4-5.

Figure 4-5 Live Video



4.4 Two-way audio

■ NOTE

Partial camera do not support two-way audio, this section do not apply.

Connection :

Step 1 Connect microphone to audio input interface of camera.

Step 2 Connect speaker to the PC audio output interface.

Step 3 Log in camera Web, click to turn on two-way audio

4.4.2 PC => Camera

Step1 Connect microphone to PC audio input interface.

Step2 Connect speaker to camera audio out interface.

Step3 Log in camera Web, click sto turn on two-way audio.

4.5 Alarm Configuration

MOTE

Partial camera do not support alarm, this section do not apply.

Alarm input and Alarm output connection:


Step1 Connect alarm input device to Alarm IN0 and Alarm COM0 of multi-head cable.

Step2 Connect alarm output device to Alarm OUT1 and Alarm COM1 of multi-head cable, alarm output interface can connect to normal open device only.

Step3 Log in Web, Choose Configuration>Alarm>I/O Alarm, set the parameters as shown in figure 4-6.

Step4 Choose Configuration>Alarm>I/O Alarm Linkage, enable the I/O Alarm and set the parameters of Schedule Setting.

Figure 4-6 Alarm

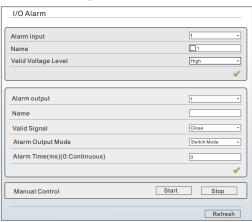

Appendix : Hazardous Substance Declaration

Component	Hazardous Substance or Element						
	Plumbum (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr6+)	Polybromina- ted Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	
Structural part	×	0	0	0	0	0	
Board/ circuit module	×	0	0	0	0	0	
Cable connector	×	0	0	0	0	0	
Accessor- ies	×	0	0	0	0	0	
\bigcirc					-		

Щ NOTE

O: indicates that the concentration of the hazardous substance in all homogeneous substances of the component is within the limit specified in SJ/T 11363-2006 Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products.

x: indicates that the concentration of the hazardous substance in at least one homogeneous substance of the component exceeds the limit specified in SJ/T 11363-2006 Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products.